




# FULL HEIGHT DISPLAY CASE ASSEMBLY GUIDE

Page 1

Questions?  
**888.373.6057**

or visit  
**wineracksamerica.com**

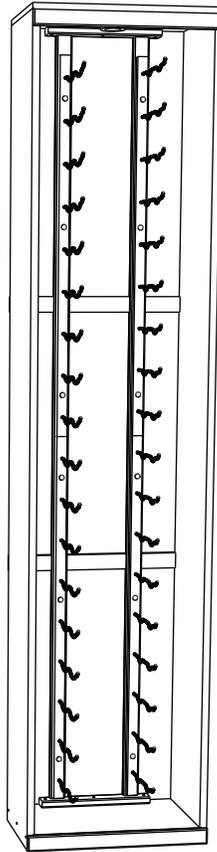


## PACKAGE CONTENTS

\*Please verify that you have the correct number of parts before proceeding.  
Depending on the model you purchased, your bundle should contain the following:

SIDE PANEL (x2)




SUPPORT LADDER (x1)

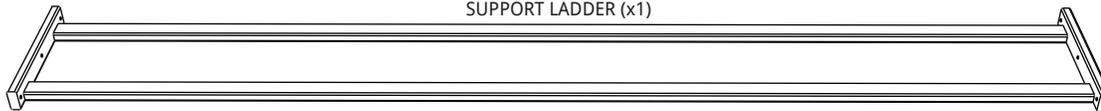


TOP PANEL (x1)



BOTTOM PANEL (x1)

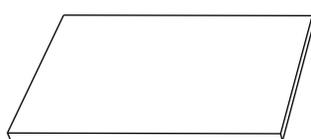

METAL RACK (x2) Shipped Separately

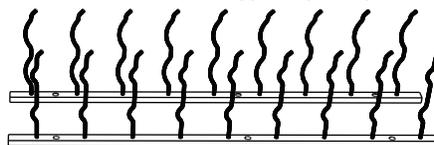

BACK CONNECTOR (x2)



TRIM PIECE(x2)



3/4" METAL SCREWS



1" WOOD SCREWS



FINISH NAILS




WOOD PUTTY



## TOOLS FOR ASSEMBLY

### Required

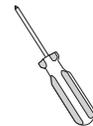

Screwdriver



Wood Glue

### Suggested



Cordless Drill



Finish Nailer



Hammer

+



Nail Setter



# FULL HEIGHT DISPLAY CASE ASSEMBLY GUIDE


Questions?  
**888.373.6057**

or visit  
**wineracksamerica.com**

Page 2


1. Find an open, flat area in which to work. Carefully remove all components from the box and remove any packaging materials. Check the parts list to verify package contents.
2. Begin by attaching the bottom panel to the two notches at the bottom of each side panel. Use a screwdriver or drill to drive 1" wood screws through the pre-drilled holes on each side panel. (figure 1)

1 ATTACH  
BOTTOM PANEL

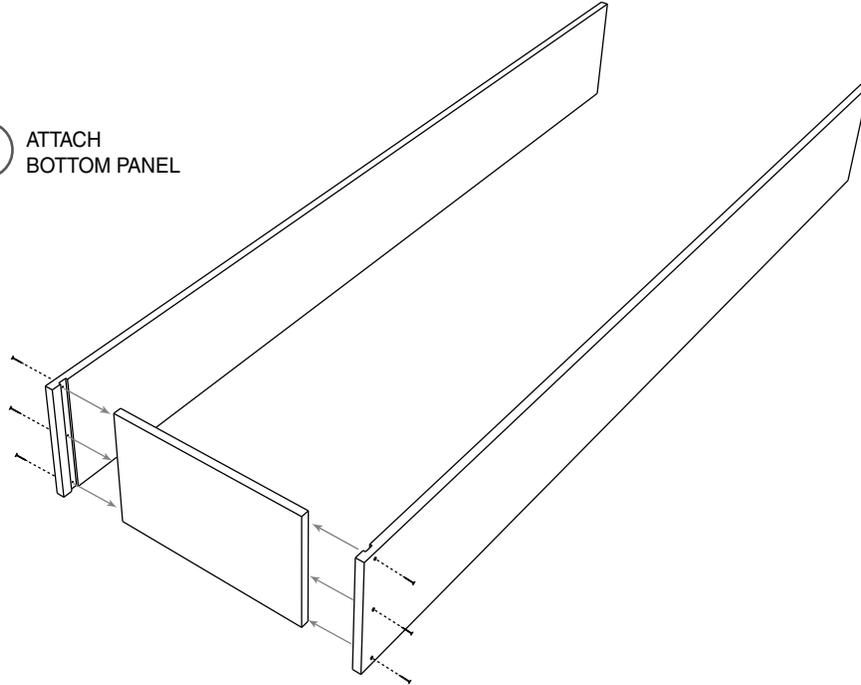

- 
3. Attach the top panel to the top of each side panel using the provided wood screws. Hold the side panels tightly together when attaching the top.

2 ATTACH  
TOP PANEL

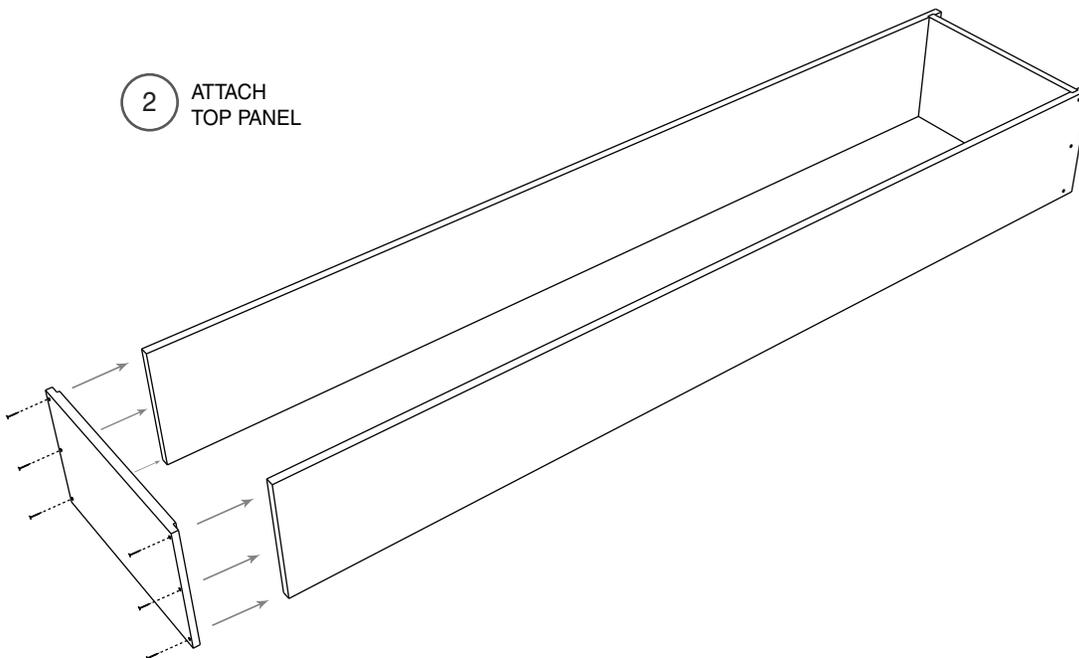




# FULL HEIGHT DISPLAY CASE ASSEMBLY GUIDE

Page 3


Questions?  
**888.373.6057**

or visit  
**wineracksamerica.com**


4. Using the provided wood screws, attach the back connectors to the two side panels. The lower connector should be 26 5/8" from the bottom of the rack, and the upper connector should be 51 3/4" from the bottom of the rack.

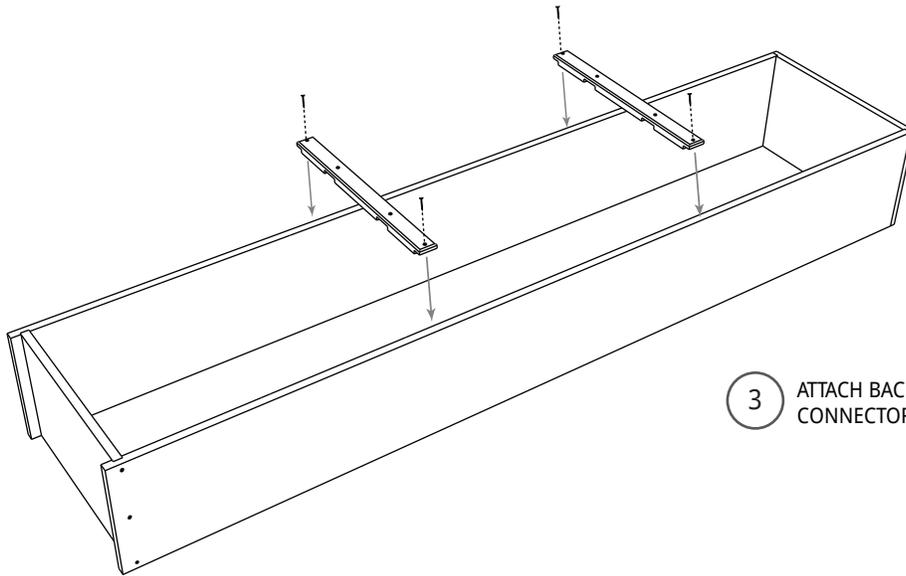

**3** ATTACH BACK CONNECTORS

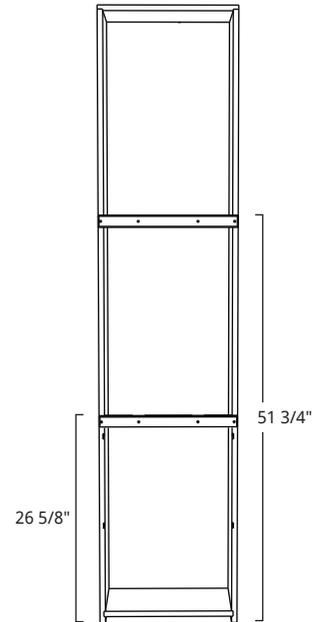


5. Carefully remove the VintageView racks and package contents from the boxes. Discard all VintageView hardware except for the plastic couplers and mounting hole caps.

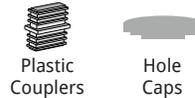


Plastic Couplers

Hole Caps

Before you begin, choose the direction the bottle necks should point:

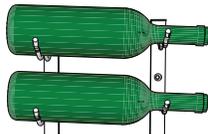


If the bottle necks are to point to the right, the base strip must be installed to the left of the neck strip.

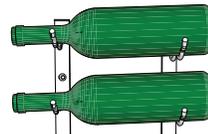

If the bottle necks are to point to the left, the base strip must be installed to the right of the neck strip.


6. Set the support ladder so that the long riser pieces are flat against the ground. (figure 4)

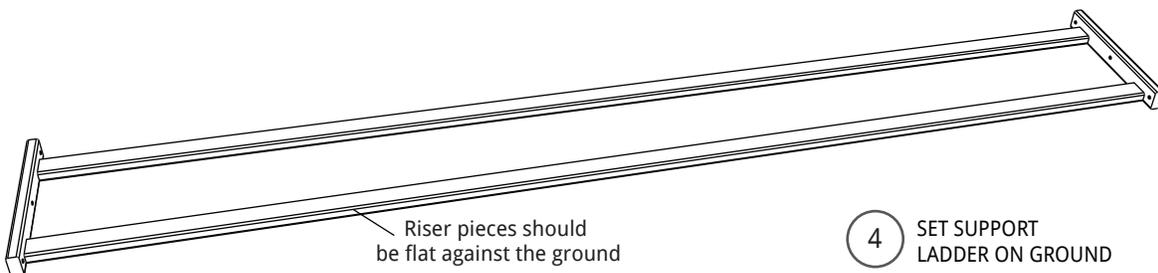


**4** SET SUPPORT LADDER ON GROUND

7. Set the first metal rack on top of the riser pieces so that the bottom of the metal racking is flush with the bottom the riser pieces. Using the provided 3/4" metal screws, attach both metal rails to the two riser pieces. Make sure to center the metal rails on each riser and hold carefully. (figure 5)
8. Remove the pre-installed plastic end plugs from the top of the previously installed metal racks and the bottom of the remaining racks. Insert the plastic couplers into their place to help align the two racks and carefully press them into place. (figure 6)
9. Attach the remaining metal racks to the riser piece using the provided 3/4" metal screws. Make sure to keep the rack centered. (figure 7)
10. Insert the mounting hole caps in the 1/2" holes on the face of the metal racks by pressing into place.


5 ATTACH FIRST METAL RACKS

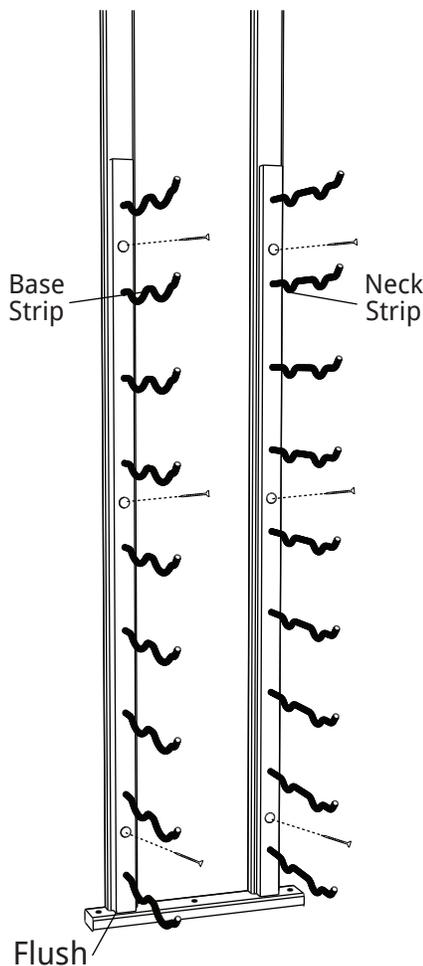

6 INSERT COUPLERS

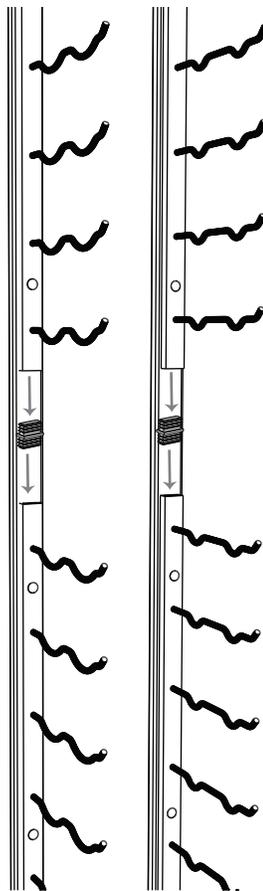

7 ATTACH REMAINING METAL RACKS

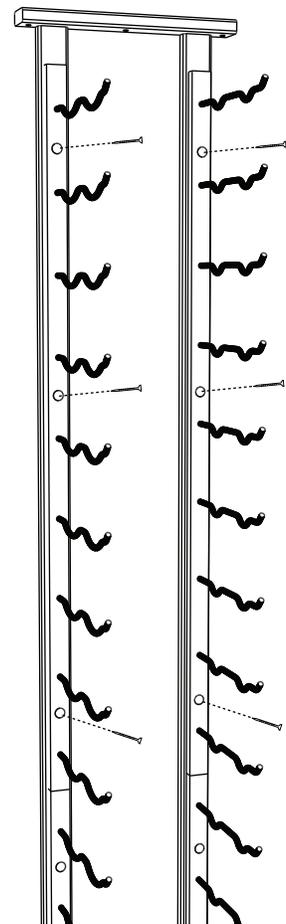



# FULL HEIGHT DISPLAY CASE ASSEMBLY GUIDE

Questions?  
**888.373.6057**

or visit  
**wineracksamerica.com**


Page 5

11. Set the assembled metal rack frame into the box frame so that the two wood risers line up with the notches on the two back connectors. Attach the risers to the connectors by drilling the provided 1" wood screws through the pre-drilled holes on the back connectors. (figure 8)
12. Attach the metal rack frame to the top and bottom of the wood frame using the provided 1" wood screws. Use the pre-drilled holes on each support piece to guide the screws into the top and bottom panels. (figure 9)
13. Attach the front trim piece so that the top of the trim is flush with the top of the rack. Attach the remaining trim piece so that the bottom is flush with the bottom of the rack.


We recommend that you use a finish nailer to drive a nail through the trim piece into each side frame piece. If you do not have a finish nailer, drive one of the provided finish nails into each side frame piece using a hammer until it is flush with the surface trim piece and countersink using a nail setter. Use wood glue for added support.

Fill the nail holes using the wood putty provided. Push a small amount of putty into each hole and wipe excess putty off the surface using a damp cloth. (figure 10)

8 ATTACH RACK  
TO CONNECTORS

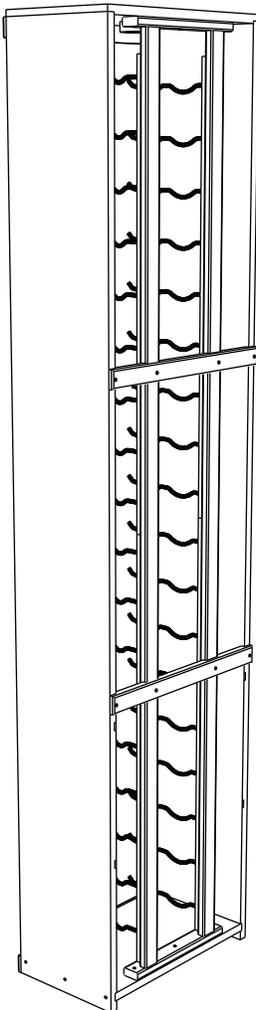

9 SECURE FRAME  
TO TOP & BOTTOM

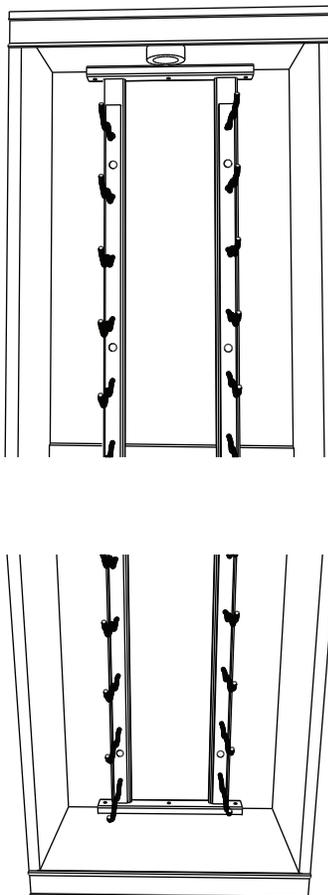

10 ATTACH TRIM  
TO TOP & BOTTOM

