



INSTALLATION GUIDE

Tongue & Groove Wall/Ceiling Paneling


WRATGPAN0 - Pine

WRATGPAN1 - Redwood


Questions?

Toll free 1-888-373-6057 or visit WineRacksAmerica.com

Tools For Assembly:

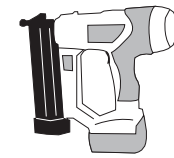


Finish Nailer

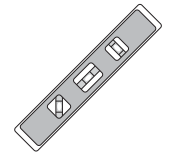

Level

If you do not have a finish nailer, a hammer and finish nails may be substituted



Hammer

+



Finish Nails

Thank you and CONGRATULATIONS for purchasing this quality product. Before installation, please ensure that you have all necessary tools & hardware. If you have any questions or problems please call customer service toll free **1-888-373-6057** Monday through Friday 7:00 am - 5:00pm MST.



Planning to stain?

For best results we recommend you stain or finish your product BEFORE installation.

1. Our tongue & groove paneling installs the same as the paneling you would find at your local home improvement store.
2. Each plank has a **tongue** and a **groove**. Each tongue is designed to fit snugly into the groove of the adjacent plank. (figure 1)
3. Begin the first row of paneling flush with the top or bottom of the wall you are treating (depending on your preference). Secure each row by driving a brad or finish nail into the area directly below the tongue, so that the next row of paneling covers the nail holes. In this way you can cover large areas with no visible fasteners. (figure 2)

***The finish nail should enter the plank directly under the tongue and be driven at a 45° angle. (figure 3)**

