



# Step 1:

## Install Wall Connectors and Mullions

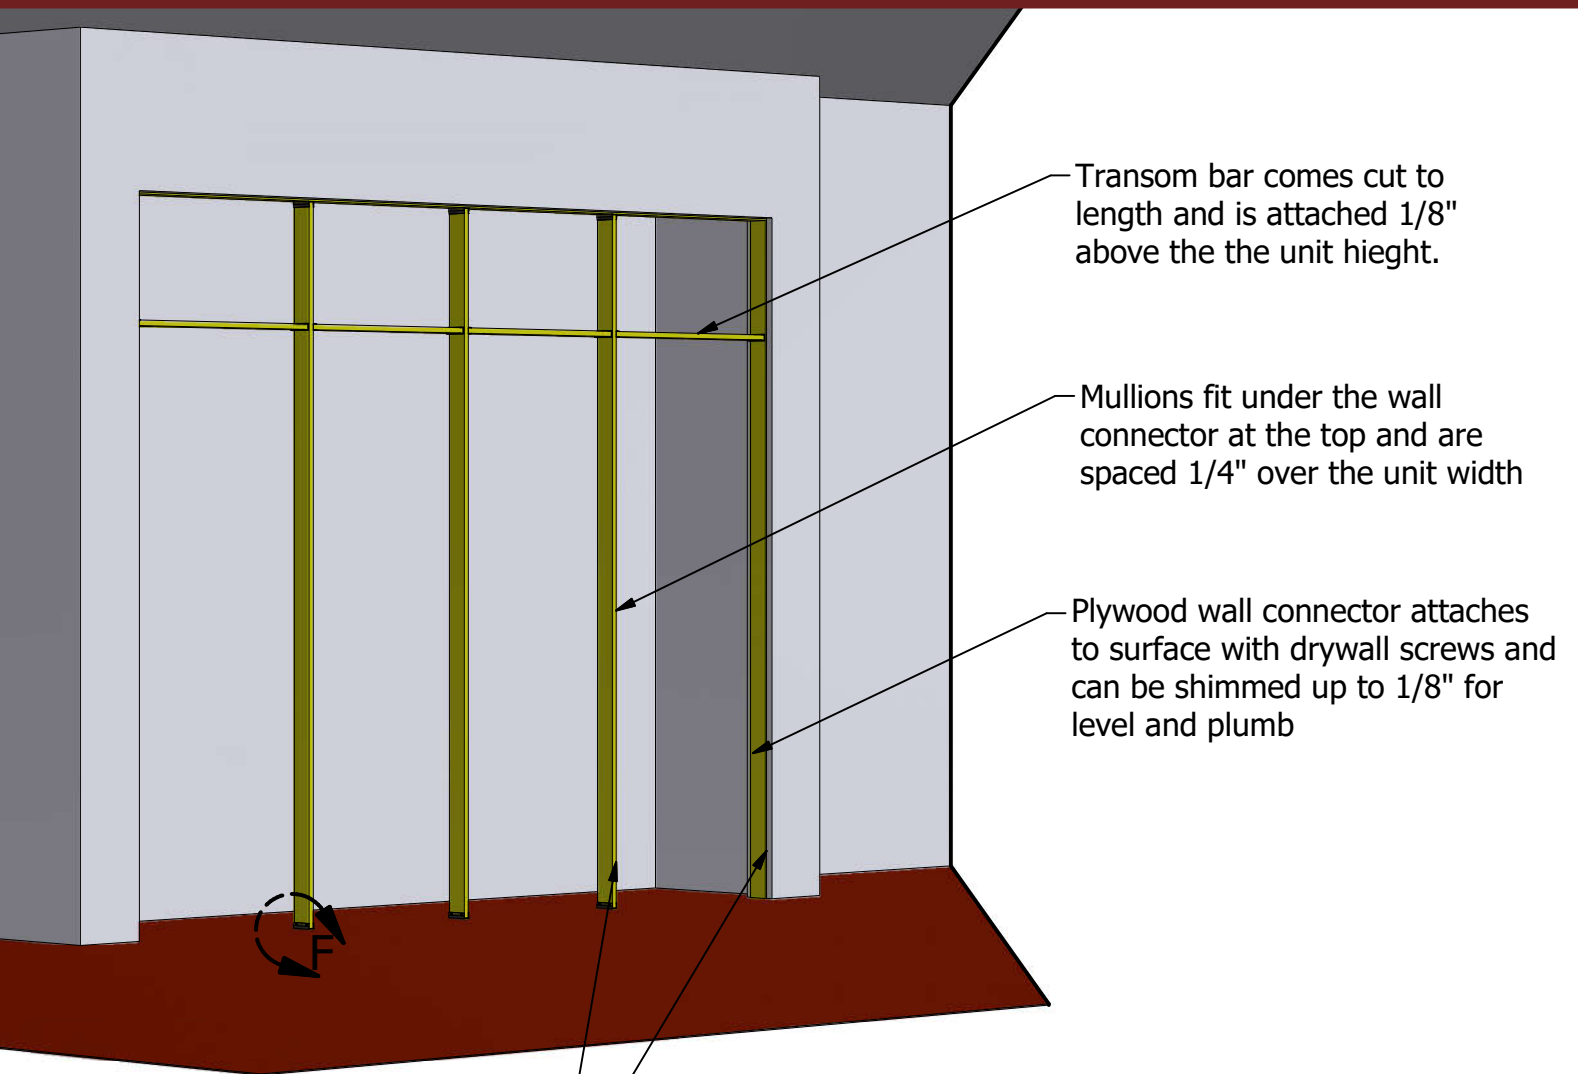

The plywood opening should measure 1/4" over the width of the unit.

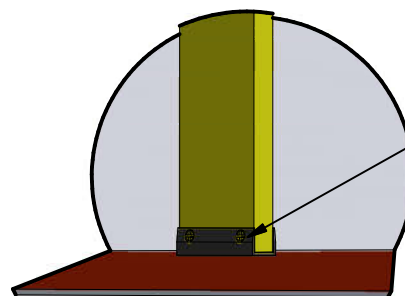

### DETAIL F

Use the provided mullion clips to attach mullions and transom bars

#### Tips:


- Use of a laser level can help make sure the wall connectors are plumb and aligned across the front edges.
- Solid blocking around perimeter helps secure wall connectors and mullions.



**Renaissance**  
GENUINE SOLID BRONZE

# Step 2:

## Insert doors & sidelites and fasten

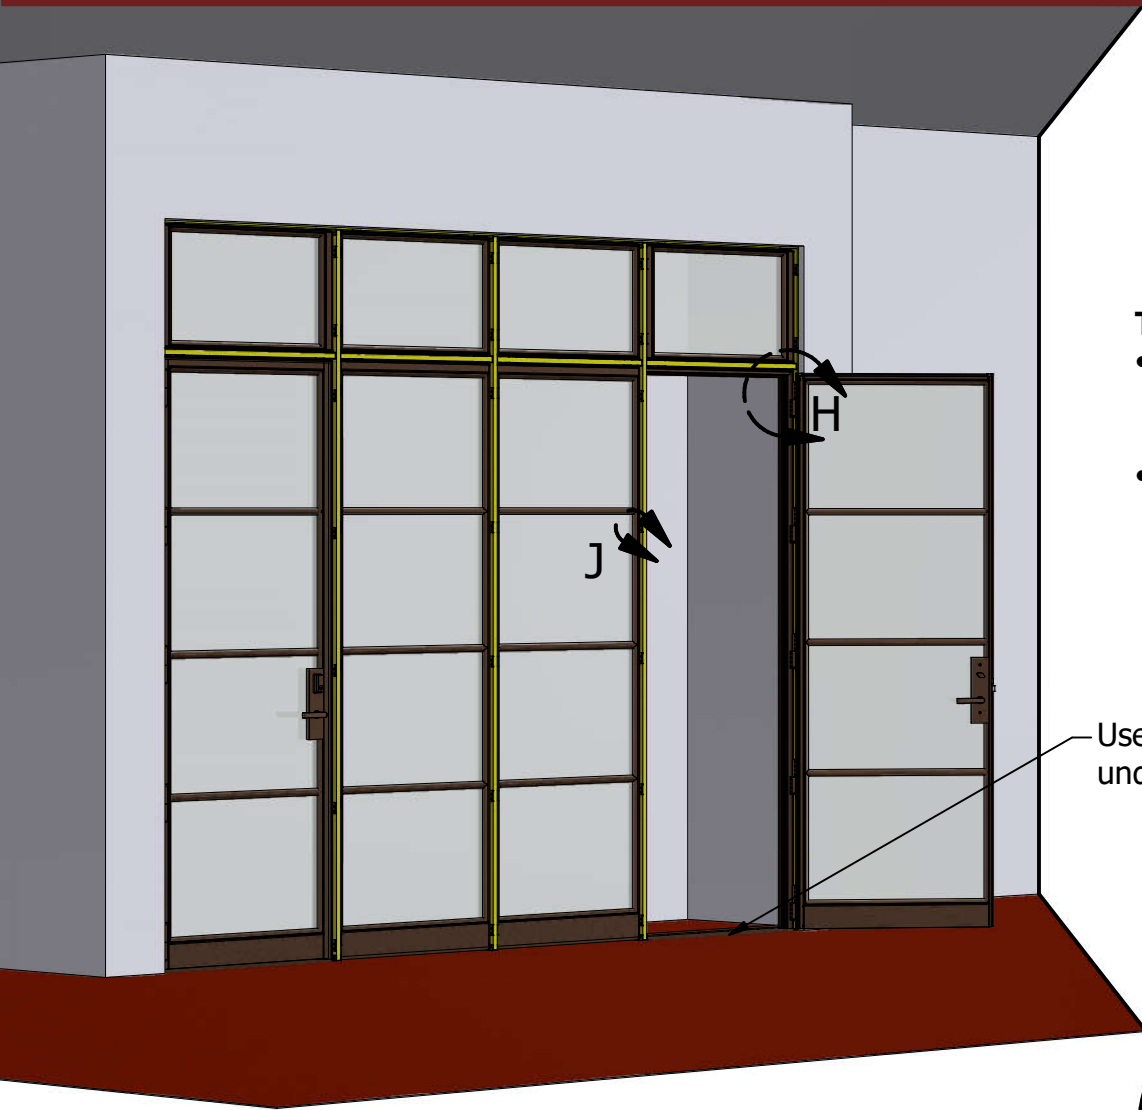


### Tips:

- Use #10 x 3/4" screws to fasten mounting tabs to mullions
- Confirm proper door operation before proceeding to next step

Use premium grade sealant under thresholds and sidelites


**Place the thrush washers over the hinge pins before lifting on the door**

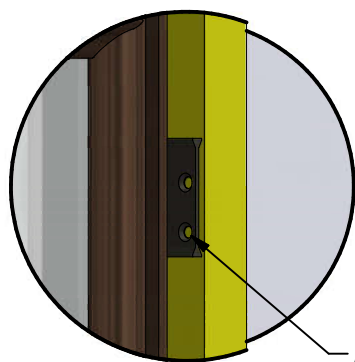

DETAIL J

Anchor the units in place with screws thru the mounting tabs

Replace the top hinge screw on the frame with a long sheetrock screw to keep the door from sagging

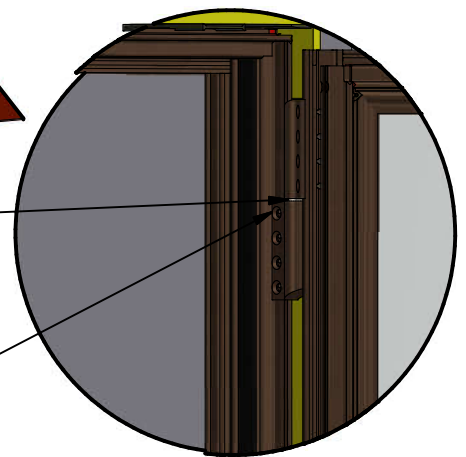

DETAIL H



# Renaissance

GENUINE SOLID BRONZE

# Step 3:

## Install wall connector covers and mullion covers



Transom mullion covers are installed after mullion and wall connector covers

Mullion covers are installed after doors are fully functional.

Wall Connector Trim can be turned either way to cover front edge

### Tips:

- Minimally expanding foam can be used to seal around frames once doors are fully functional
- Use a quality sealant to adhere and seal trim in place.



**Renaissance**  
GENUINE SOLID BRONZE