




SOLID DIAMOND BIN ASSEMBLY GUIDE

Page 1

Questions?
888.373.6057
or visit
wineracksamerica.com

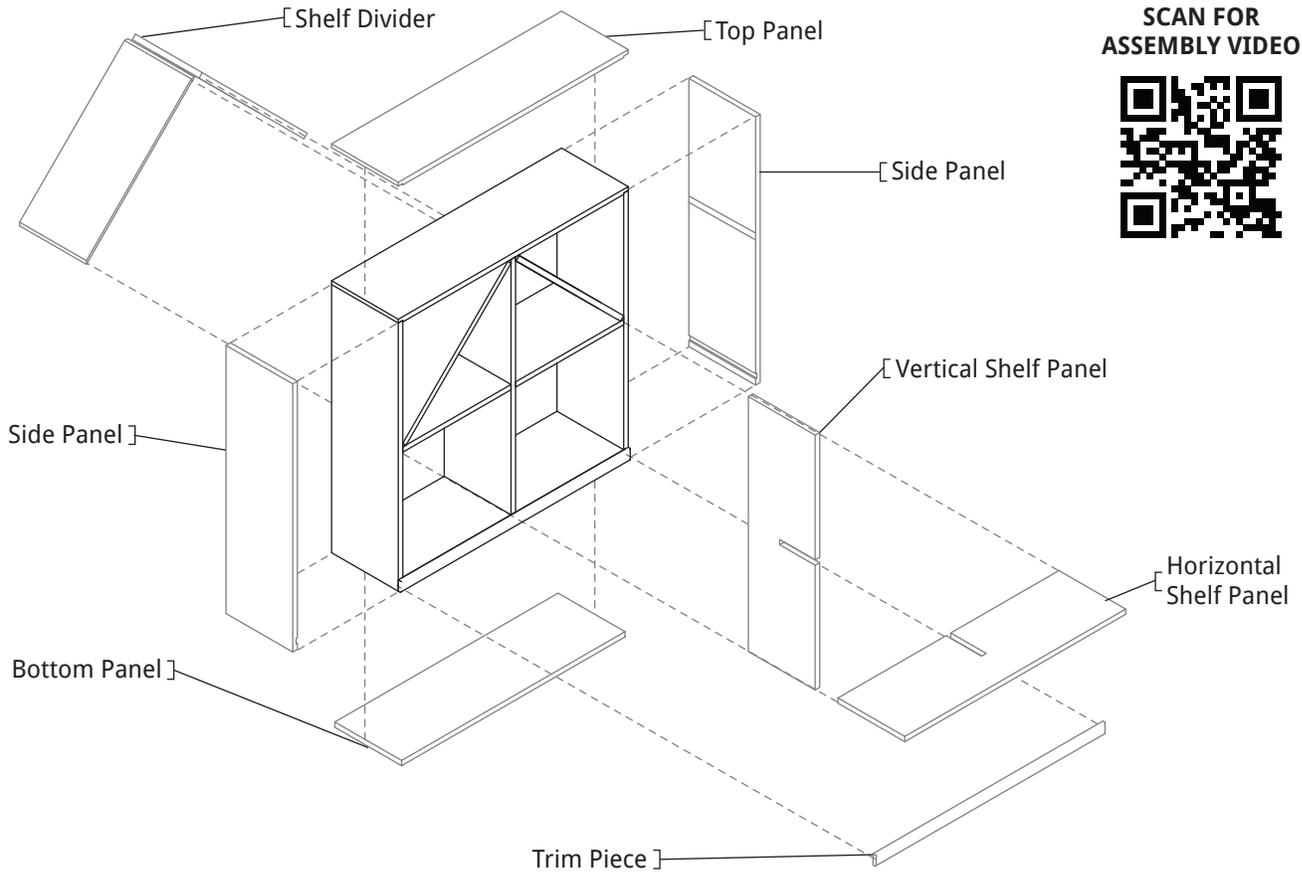


SCAN FOR
ASSEMBLY VIDEO




PACKAGE CONTENTS

*Please verify that you have the correct number of parts before proceeding.
Depending on the model you purchased, your bundle should contain the following:


TOP PANEL (x1)

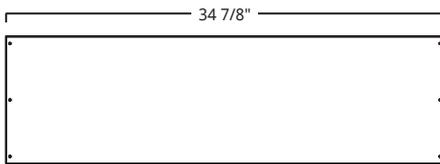


SIDE PANEL (x2)

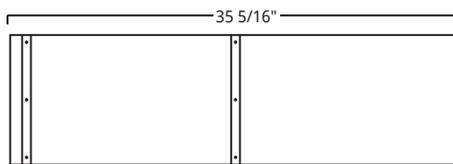


HORIZONTAL SHELF PANEL (x1)

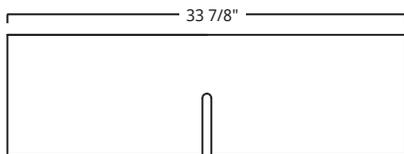


BOTTOM PANEL (x1)

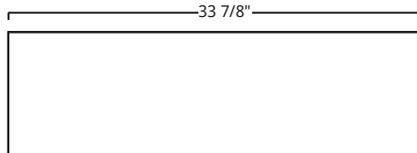


VERTICAL SHELF PANEL (x1)

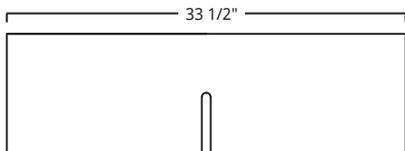

SHELF DIVIDER (DEPENDS ON MODEL)

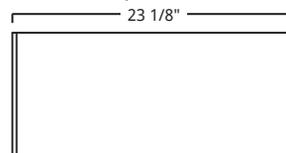

BOTTOM TRIM PIECE (x1)



SHIM (x1)



WOOD SCREWS




FINISH NAILS



WOOD PUTTY

TOOLS FOR ASSEMBLY

Required



Screwdriver



Wood Glue

Suggested



Cordless Drill



Finish Nailer



Hammer



Nail Setter



Rubber Mallet




SOLID DIAMOND BIN ASSEMBLY GUIDE

Questions?
888.373.6057


or visit
wineracksamerica.com

Page 2

1. Find an open, flat area in which to work. Carefully remove all components from the box and remove banding or protective wrapping. Check the parts list to verify you have received a complete package.
2. Using the provided wood screws, attach the bottom panel into the bottom grooves of the two side panels. (figure 1)

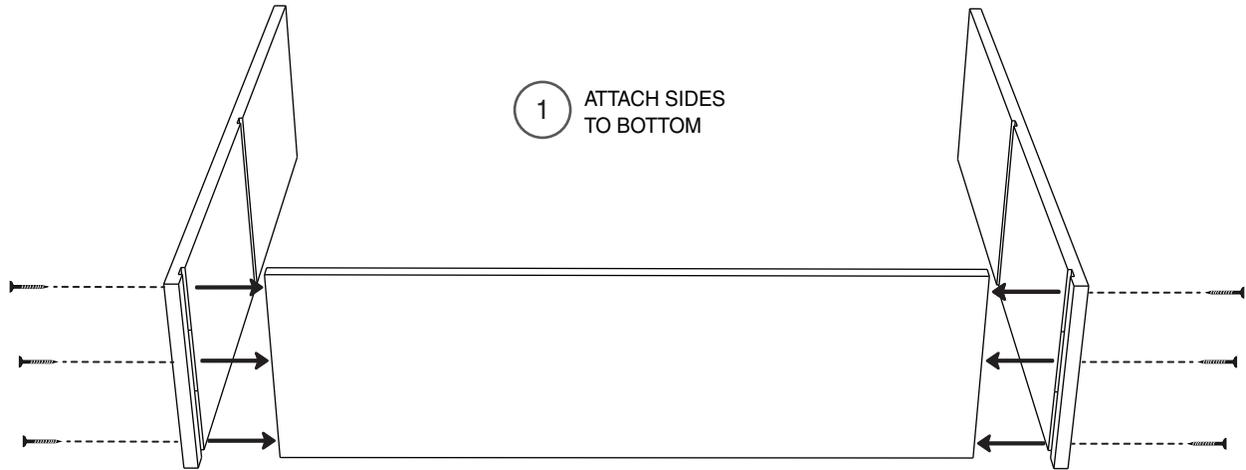

3. Attach the top panel to the side panel pieces using the wood screws provided. Make sure to keep the side panels and top panel held tightly together when securing. It may be easier to stand the rack upright when securing the top frame piece. (figure 2)

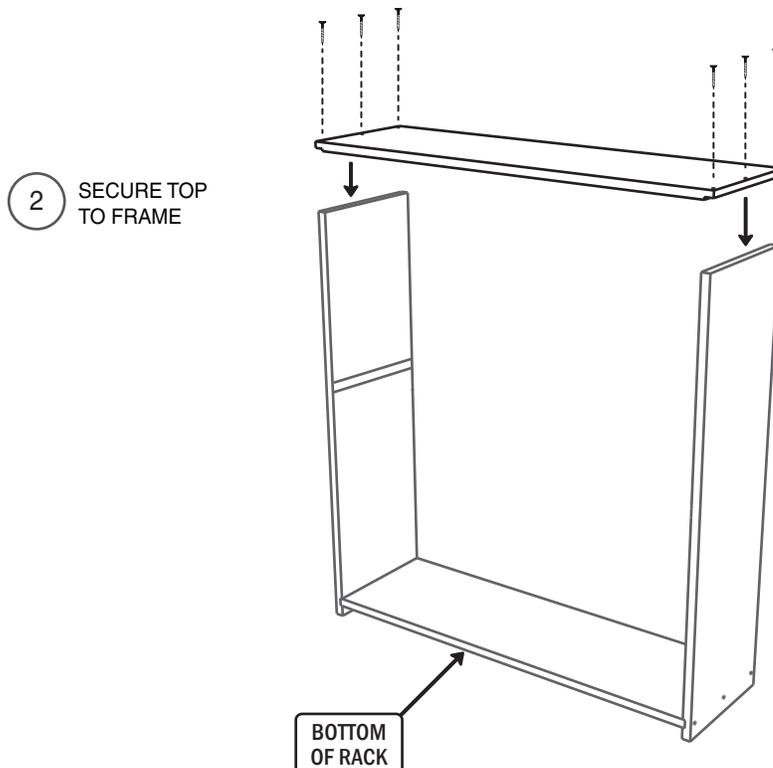



SOLID DIAMOND BIN ASSEMBLY GUIDE

Questions?
888.373.6057


or visit
wineracksamerica.com

Page 3

4. Insert horizontal shelf panel into the grooves on the two side panels. Make sure the notch on the shelf panel is facing downward. Attach using provided wood screws. (figure 3)


*** The horizontal shelf panel is similar to the vertical shelf panel. Make sure to use the longer panel in this step.**

3 ATTACH HORIZONTAL SHELF PANEL

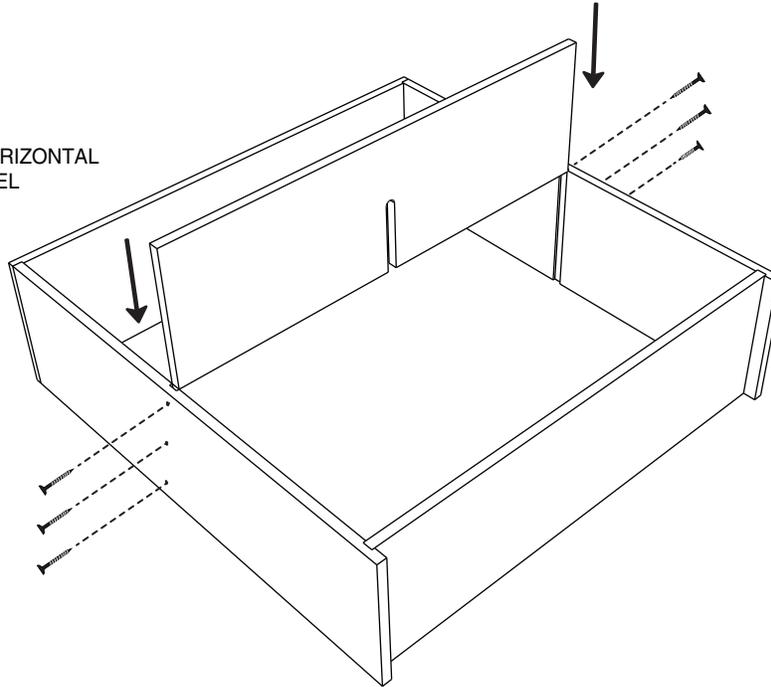


-
5. Flip rack over and inset the vertical shelf panel into the notch on the horizontal panel and press into place. Do not force into place. Use a rubber mallet if necessary. (figure 4)

4 INSERT VERTICAL SHELF PANEL

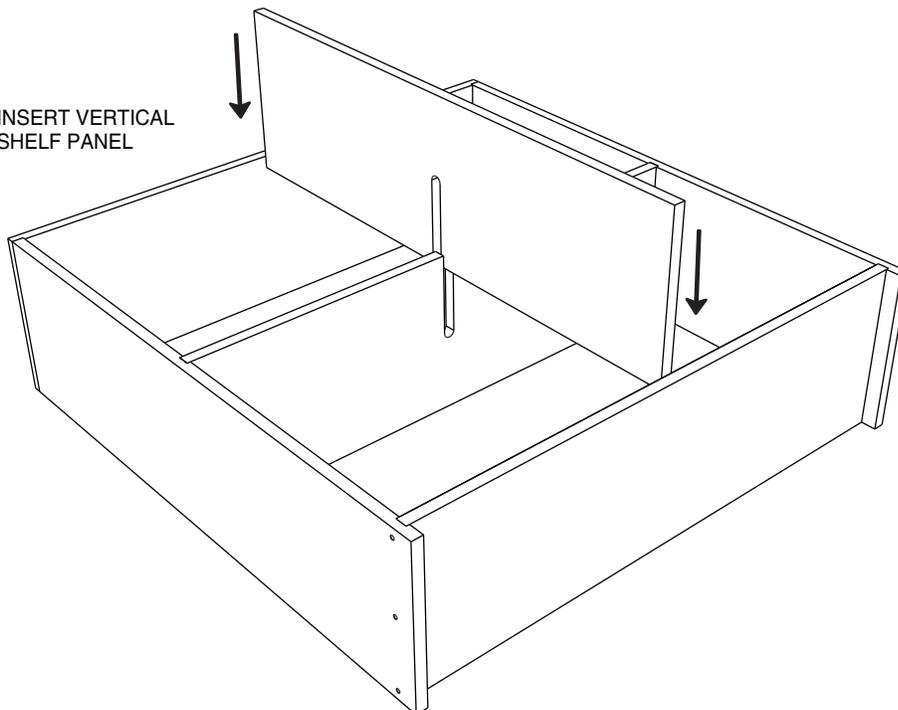

6. Insert the shelf dividers into the frame to match your configuration (figure 5). If your rack did not include any shelf dividers, please proceed to the next step.

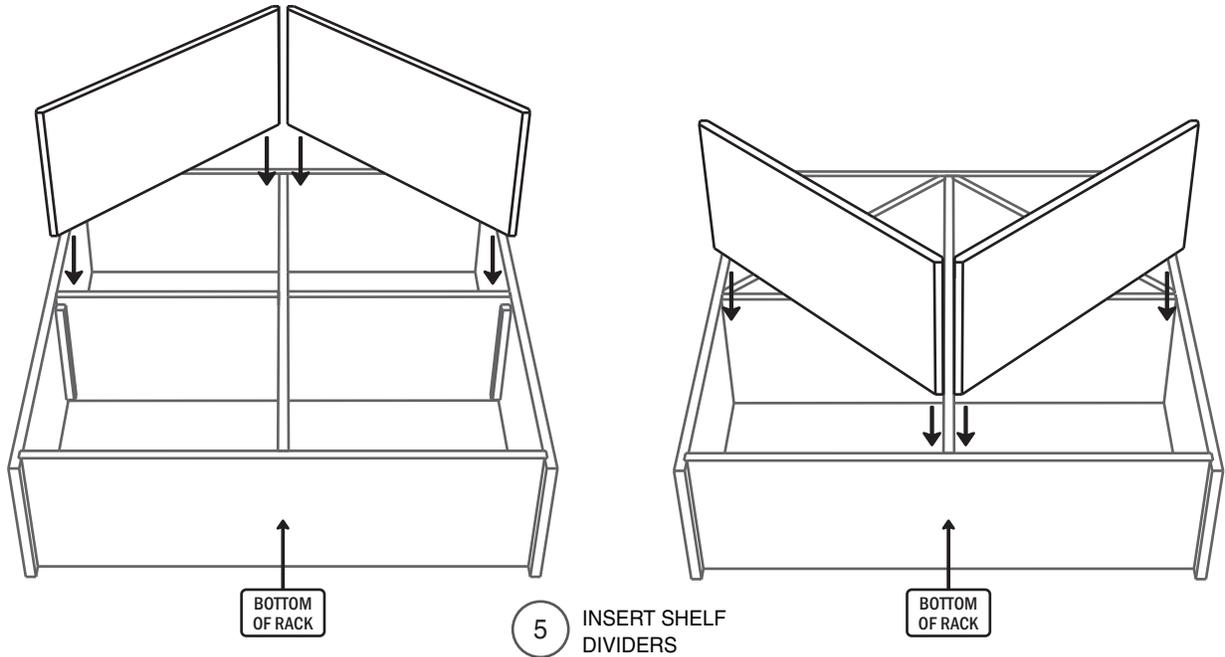


TIP: The dividers slide into place with little or no force. If necessary, use a rubber mallet to lightly tap the shelf dividers into place.

7. At this point, there is no specific front of the rack. Choose the side of the rack that you would like to be the front and secure the bottom trim piece. The bottom trim piece should be flush with the bottom of the rack. (figure 6)

We recommend that you use a finish nailer to drive a nail through the trim piece into each side frame piece. If you do not have a finish nailer, drive one of the provided finish nails into each side frame piece using a hammer until it is flush with the surface trim piece. Then, countersink the nail using a nail setter until the head of the nail is about 1/16" below the surface of the wood. Use wood glue for added support.

Fill the nail holes using the wood putty provided. Push a small amount of putty into each hole and wipe excess putty off the surface using a damp cloth.

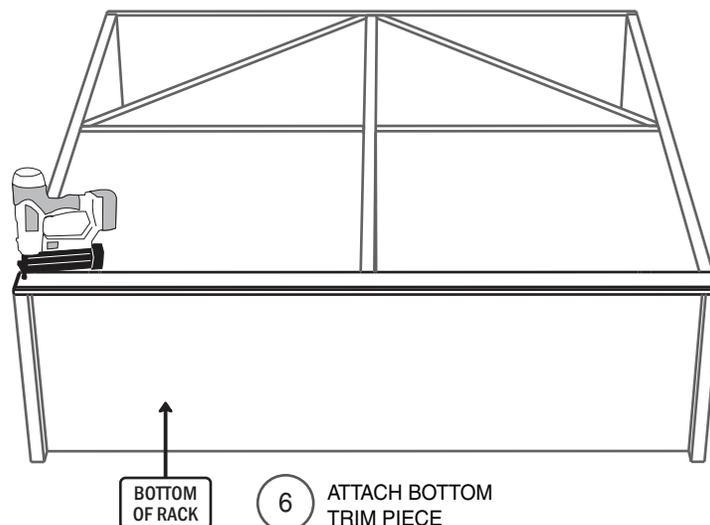




SOLID DIAMOND BIN ASSEMBLY GUIDE

Questions?
888.373.6057


or visit
wineracksamerica.com

Page 5

8. To prevent the bottom of the rack from bowing under the weight of your bottles, slide the bottom frame shim under the back of the rack. (figure 7)

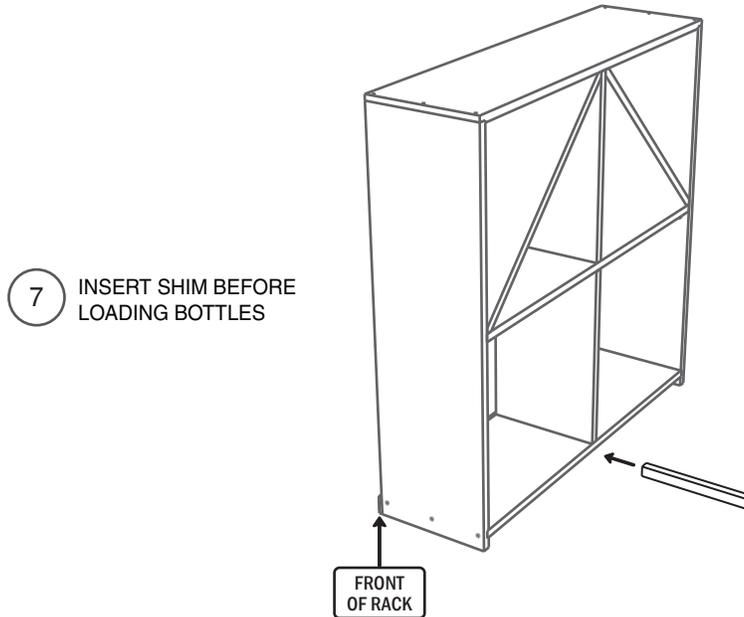

9. If you purchased a solid top, secure it by placing a small amount of wood glue on the top of the box frame. Clamp the top to the frame using standard wood clamps until fully dry. (figure 8)

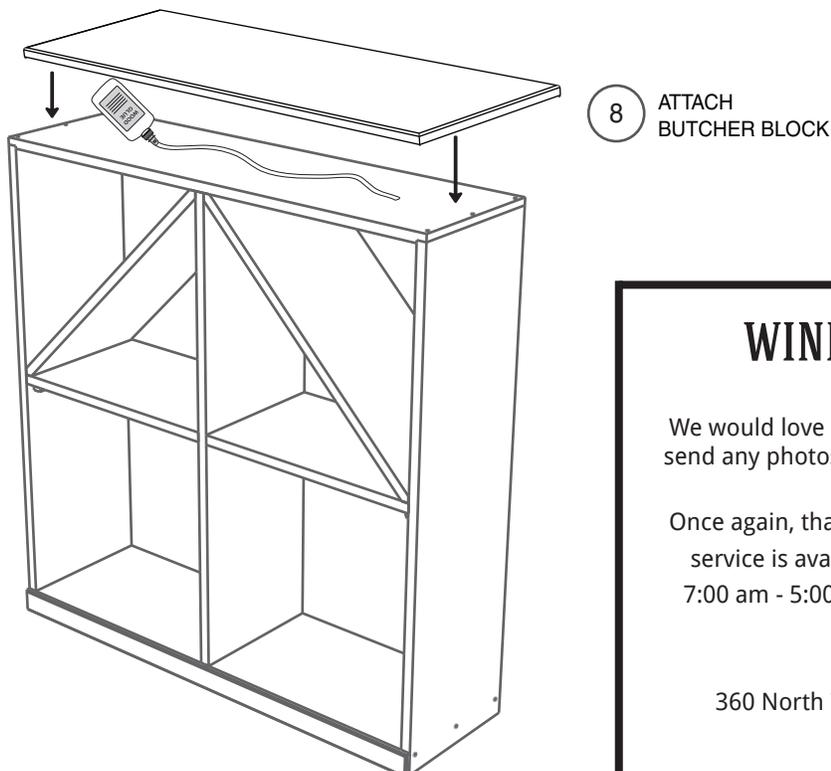

WINERACKSAMERICA.COM

We would love to see your wine racks in use! Please feel free to send any photos of your rack to photos@wineracksamerica.com

Once again, thank you for your business. Remember, customer service is available to answer any questions Monday-Friday 7:00 am - 5:00 pm MST. Please feel free to contact us for any wine storage needs.

360 North 700 West Suite F • North Salt Lake, UT 84054
(toll free) 888-373-6057
(fax) 801-936-0534